



EXPRESS
YOURSELF

rebel



URBAN
CRUISER
WITH
LOW RIDING STYLE



500^{CC} DOHC
PARALLEL TWIN - CYLINDER ENGINE
WITH ASSIST/SLIPPER CLUTCH



NEW LED HEADLIGHT



NEW LED TAIL LIGHT



NEW DIGITAL PANEL METER



ANTHLOCK BRAKING SYSTEM



ADJUSTABLE DUAL REAR SUSPENSION

SPECIFICATIONS

DIMENSION
Dimension 2.205 x 820 x 1.090 mm | Wheel Base 1.490 mm | Ground Clearance 125 mm | Seat Height 690 mm | Curb Mass 191 kg | Fuel Tank Capacity 11,2 L

ENGINE
Engine Type 4-Stroke, DOHC Parallel Twin Cylinder | Displacement 471,03 cc | Cooling System Liquid Cooled | Fuel Supply System PGM-FI (Programmed Fuel Injection System) | Bore x Stroke 67 x 66,8 mm | Compression Ratio 10,7 : 1 | Max. Power 33,5 kW/8.500 rpm | Max. Torque 43,6 Nm/5.500 rpm | Transmission 6 Speed | Gear Shift Pattern 1-N-2-3-4-5-6 | Starting System Electric | Clutch System Wet Multiplate | Lubrication Type Wet (Pressing and Spray) | Oil Capacity 2,5 L (Periodic Exchange)

FRAME
Frame Type Diamond Type, Steel | Front Tires 130/90-16M/C (67H) | Rear Tires 150/80-16M/C (71H) | Front Brake Hydraulic, Single 296 mm Disc | Rear Brake Hydraulic, Single 240 mm Disc | Brake System ABS 2 Channel | Front Suspension Showa, 41 mm Telescopic Fork | Rear Suspension Showa, Twin Rear Suspension

ELECTRICAL
Ignition Type Full Transisterized (MF 12V-7Ah) | Spark Plug Type NGK CPR8EA-9 | Headlight High 23,2W-Low 11,2W

AVAILABLE COLORS



MATTE JEANS BLUE METALLIC



MATTE ARMORED SILVER METALLIC



GRAPHITE BLACK

rebel

#CARI_aman
saat naik motor

Gunakan selalu helm, pasang tali pengikat dan kencangkan secara benar.
Gunakan jaket lengan panjang dan sarung tangan yang dirancang untuk keselamatan dan kenyamanan berkendara.
Pakailah celana panjang yang pas dan nyaman serta gunakan sepatu untuk kestabilan saat kaki berpijak.

EXCLUSIVE AT
Honda BigWing

CONTACT CENTER
1-500-989
0811-9-500-989
customer@astra-honda.com

Jakarta, Bandung, Semarang, Yogyakarta, Surabaya, Bali, Banjarmasin, Makassar dan Medan
www.hondabigbike.id
www.astra-honda.com

Cara perawatan yang aman:
• Periksa tinggi permukaan oli dan gunakan selalu AHM Oil.
• Periksa rem dan tekanan udara ban.
• Gunakan selalu Honda Genuine Parts, suku cadang asli sepeda motor Honda, yang didistribusikan oleh PT Astra Honda Motor.
• Lakukan perawatan teratur di bengkel-bengkel Honda BigWing.

