

**AHM**  
PT Astra Honda Motor

***Honda BigBike***  
— EXCITES THE WORLD —



**NEW ADVENTURES**

**X-ADV**





# SPECIFICATIONS

## DIMENSION

Dimension 2.260 x 910 x 1.381 mm | Fuel Tank Capacity 13,1 L | Ground Clearance 162 mm | Curb Weight 239 kg | Seat Height 820 mm | Wheel Base 1.588 mm

## ENGINE

Engine Type Liquid-Cooled, 4 Stroke, SOHC Two Cylinder | Displacement 745,06 cm<sup>3</sup> | Fuel Supply System PGM-FI (Programmed Fuel Injection System) | Bore x Stroke 77 x 80 mm | Compression Ratio 10,7 : 1 | Max. Power 40,1 kW/6.250 rpm | Max. Torque 68,1 Nm/4.750 rpm | Transmission DCT, 6 Speed | Starting System Electric | Clutch System Wet, Multiple Hydraulic Dual Clutch | Oil Capacity 3,2 L (periodic exchange)

## FRAME

Frame Type Diamond, Steel | Front Tires 120/70R17M/C 58H | Rear Tires 160/60R15M/C 67H | Front Brake Hydraulic, Double 296 mm Disc | Rear Brake Hydraulic, Single 240 mm Disc | Brake System ABS 2 Channel | Front Suspension Showa, 41mm Inverted Adjustable Telescopic Fork | Rear Suspension Aluminum Swing Arm, Adjustable Monoshock

## INSTRUMENTS AND ELECTRIC

Ignition Type Full Transisterized, Battery | Spark Plug Type NGK IFR6G-11K | Front Headlight Hi 11 W x 2 LED | Rear Headlight Low 7,27 W x 2 LED

## AVAILABLE COLORS



MAT MOONSTONE SILVER METALLIC



MAT PEARL GLARE WHITE



GRAND PRIX RED



MAT BULLET SILVER



Honda SMART KEY SYSTEM



ALL LED LIGHTING SYSTEM



## HSTC

Honda SELECTABLE TORQUE CONTROL



FULL DIGITAL PANEL METER



ADJUSTABLE INVERTED FRONT FORK



Gunakan selalu helm, pasang tali pengikat dan kencangkan secara benar.

Gunakan jaket lengan panjang dan sarung tangan yang dirancang untuk keselamatan dan kenyamanan berkendara.

Pakaihlah celana panjang yang pas dan nyaman serta gunakan sepatu untuk kestabilan saat kaki berpijak.



CONTACT CENTER  
1-500-989  
0811-9-500-989  
customercare@astra-honda.com

Jakarta, Bandung, Semarang, Yogyakarta, Surabaya, Bali, Banjarmasin, Makassar dan Medan  
www.hondabigbike.id  
www.astra-honda.com

## Cara perawatan yang aman:

- Periksa tinggi permukaan oli dan gunakan selalu AHM Oil.
- Periksa rem dan tekanan udara ban.
- Gunakan selalu Honda Genuine Parts, suku cadang asli sepeda motor Honda, yang didistribusikan oleh PT Astra Honda Motor.
- Lakukan perawatan teratur di bengkel-bengkel Honda BigWing.



Distribusi oleh:

